

 
What is in the Box?

Radio | mains adaptor | quick start guide | safety/warranty leaflet

Features

- DAB/DAB+/FM RDS radio with colour display and built-in battery charging
- Bluetooth audio streaming from iPhone or Smartphone
- 40 presets (20 x DAB and 20 x FM)
- 6 equaliser profiles and separate bass and treble
- Telescopic aerial
- AC adaptor included/Roberts BP3 Lithium Ion battery (not included)
- Loudspeaker with tuned bass reflex enclosure
- LCD colour display with adjustable dimmer
- 2 alarm timers (DAB/FM or buzzer)
- USB charging of smartphone, tablet or similar devices
- Stereo auxiliary input and headphone sockets

Controls

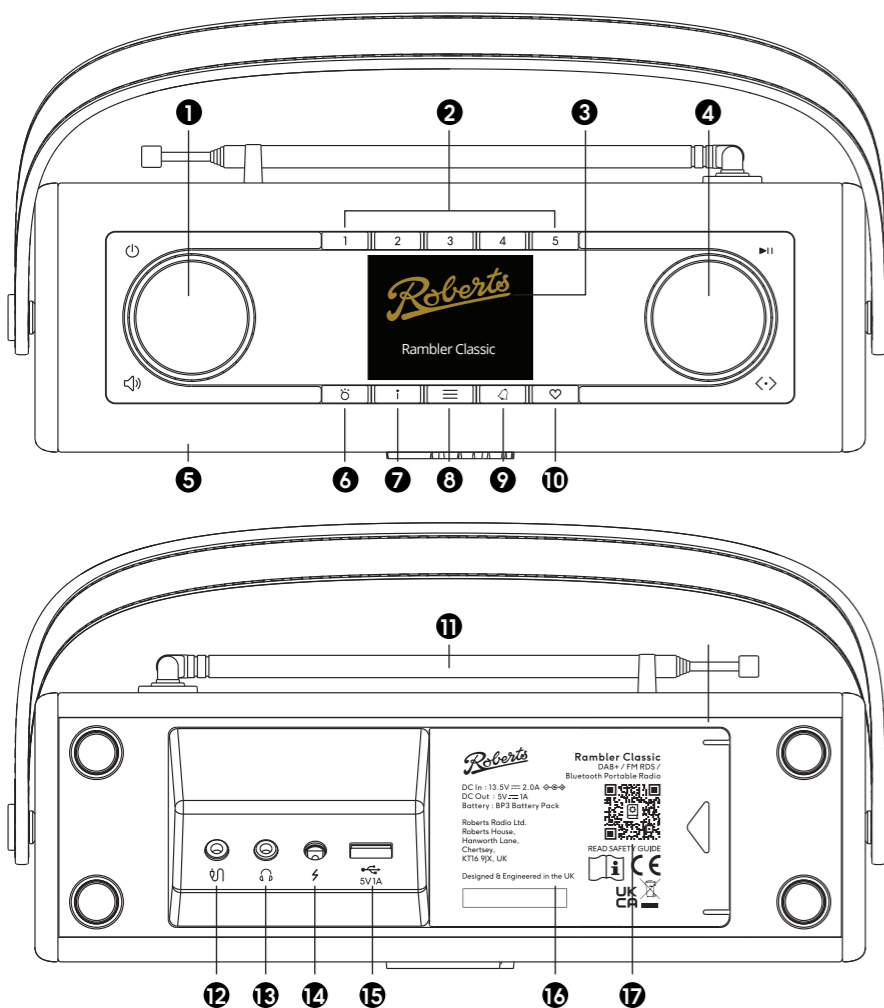


- | | |
|-------------------------------|------------------------------------|
| 1 Power/ Volume/Sleep | 10 Favourites button |
| 2 Preset Buttons 1-5 | 11 Telescopic aerial |
| 3 LCD display | 12 Auxiliary input socket |
| 4 Tuning, Select & Navigation | 13 Headphone socket |
| 5 Loudspeaker | 14 DC input socket |
| 6 Mode button | 15 Charge socket |
| 7 Info button | 16 Battery compartment |
| 8 Menu button | 17 QR code for online instructions |
| 9 Alarm button | |

STEP 1 - Plug in & play DAB radio

A - Connect to the mains

 
Please read the safety leaflet provided before connecting your radio to the mains.

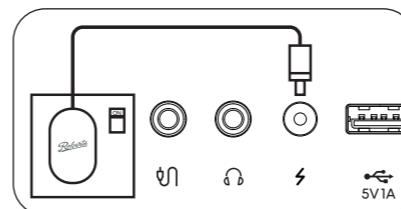

- 1 Place your radio on a flat surface.
- 2 Plug the cable from the mains adaptor into the DC input socket.
- 3 Plug the mains adaptor into a wall socket and switch on the socket.
- 4 The display on the radio will show a start up screen for a few seconds. If this is the first time that you use your radio (or after a Factory Reset) the display will show the language menu.


B - Switch on your radio

 - 1 Press the **Power/ Volume** dial to switch on the radio. After each use the radio will remember the mode used and then switch on in that mode the next time it is used.
- 2 If this is the first time the radio is used a scan of the Band III DAB channels will be carried out.

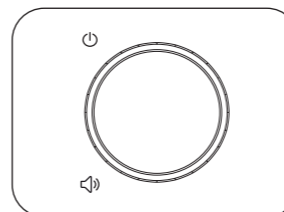

C - Select a DAB radio station

 - 1 If needed, press and release the **Mode** button until the DAB mode is selected.
 - 2 Rotate the **Tuning** control to step through the list of available DAB stations.
 - 3 Press the **Tuning** control to select the station. Adjust the **Volume**.
 - 4 Some radio stations may have one or more additional broadcasts associated with them. If these are available they will appear immediately after the main station.
 - 5 Press the **Info** button to cycle through the various display options.
- The display options are scrolling text, program type, multiplex name, channel/frequency, bit rate, signal strength (the minimum signal marker (⊂)) shows the minimum strength needed for good DAB reception), date.

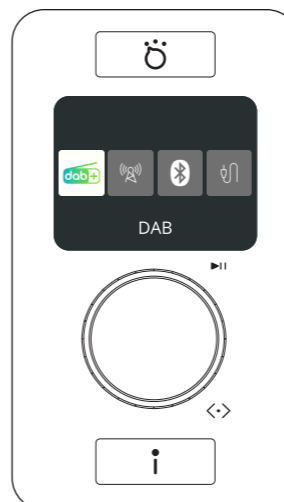


	A short press will switch your radio On or to Standby. A short press will cancel an active alarm. Rotate to adjust the volume level. A long press will access the sleep timer when the unit is playing
	A short press will access each operating mode in turn.
	A short press will access the current menu system. Press the Menu button to go back to a higher level menu or if an error is made.
	Rotate clockwise or anti-clockwise to scroll menu items. A short press on Tuning/Select will select highlighted menu items. A short press on Tuning/Select will access snooze when an alarm sounds.
	A short press will display information relating to the music being played. A long press will access the brightness settings.
	A short press will change alarm status. A long press will access alarm settings.
	A short press will recall preset 1-5. A long press will allow preset stations 1-5 to be saved.

D - Scan for DAB stations

As time passes new stations may become available or you may have moved to a different part of the country.

 
- 1 Press and release the **Mode** button until DAB is selected.
- 2 Press and hold the **Menu** button and then select 'Full scan' by pressing the **Tuning** control
- 3 Your radio will perform a scan of the Band III DAB channels. As new stations are found, they will be added to the list stored in the radio.

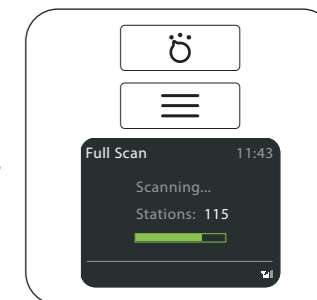

STEP 2 - Play FM radio

A - Search tuning - FM

 - 1 Fully extend the **telescopic aerial**.
 - 2 Press and release the **Mode** button until FM is selected.
 - 3 Rotate the **Tuning** control clockwise or anti-clockwise to manually tune your radio. Press the **Tuning** control to scan upwards or downwards (direction is set by the last manual rotation). The radio will stop automatically when it finds a station of sufficient strength.
 - 4 If the signal is strong enough and there is RDS data present then the radio will display the station name. Adjust the **Volume**.
- Press the **Info** button to cycle through the various display options.
- The display options are scrolling text, program type, frequency, audio type, signal strength, date.

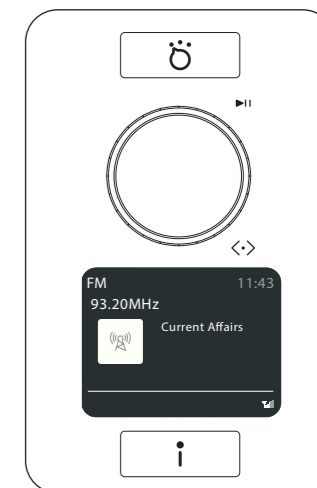

STEP 3 - Bluetooth

Connecting Bluetooth devices

 
- 1 Ensure **Bluetooth** is enabled on your smart device.
- 2 Ensure your radio is switched on. Press and release the **Mode** button until the Bluetooth mode is selected on your radio.
- 3 The radio will show that it is 'Looking for Device...'
- 4 On your smart device select 'Rambler Classic'. Once the connection is established, you may now play your music. Adjust the volume on your Bluetooth device or on your radio.

Playing audio

- 1 The audio player in your smart device may be able to respond to the **Play/Pause**, **Next** or **Previous** track on the radio.
 - 2 Press the **Tuning** control to pause playback. Press the control again to resume playback.
 - 3 Rotate the control clockwise or anti-clockwise to skip to the next or previous track.
- Note:** Not all player applications or devices may respond to all of these controls.

Connect a different device

- 1 To connect a different device, press the **Menu** button, select 'Disconnect' and confirm 'Yes' by pressing the **Tuning** control. Your radio will become discoverable by other devices.
- 2 To clear all Bluetooth pairings, press the **Menu** button, select 'Clear Pairing' and confirm 'Yes' by pressing the **Tuning** control.

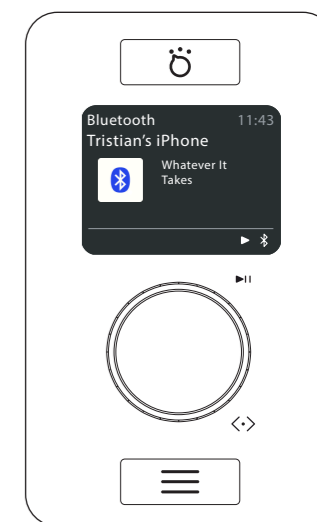

STEP 4 - Presets

Preset radio stations

There are 40 memory presets, 20 for DAB and 20 for FM. Presets are remembered in the event of a power failure.

To store a preset


- 1 Tune to the required radio station.
- 2 Apply a long press on the **Favourites** button
- 3 Use the **Tuning** control to scroll to an unused preset or a preset you wish to change.
- 4 Press the **Tuning** control to store. 'Preset 2 Saved' will be displayed. The preset number will be shown on the playing display.

Buttons 1-5 enable quick access to the first five stored presets on the favourites list. A long press on buttons 1-5 will store a tuned in radio station.

To recall a preset

1. Choose DAB or FM mode.
- 2 Apply a short press on the **Favourites** button.
- 3 Use the **Tuning** control to scroll to the desired preset.
- 4 Press the **Tuning** control to select it.

 If you want to select preset 1-5 from the favourites list, apply a short press on button 1-5.

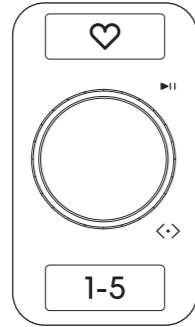

STEP 5 - Alarms

 
When in standby or switched on, the display will show a clock and the alarm state.

Apply a short press to the Alarm button to toggle the alarm 1 and alarm 2 on and off.

- 1 Apply a long press on the **Alarm** button to access the alarm settings. Select which to set by rotating and then pressing the **Tuning** control.
- 2 Choose 'Frequency' to set what days the alarms come on from 'Daily', 'Once', 'Weekends' or 'Weekdays'.
- 3 Choose 'Wake Up time' to first set the hour and then the minutes.
- 4 Choose 'Source' to select either 'Buzzer', 'DAB' or 'FM'. If 'Alarm Mode' is set to either 'DAB' or 'FM', an option to set a radio 'Preset' is available. Select either 'Last listened' or one of the saved presets '01-20' ('Empty' cannot be selected).
- 5 Next, select the 'Volume' to set the alarm volume level from 1-32.
- 6 Choose 'Save' to store the alarm settings.

Snooze the alarm for 9 minutes by pressing any button except the **Power/ Volume** dial.

Press the **Power/ Volume** dial when snoozing to cancel the alarm.

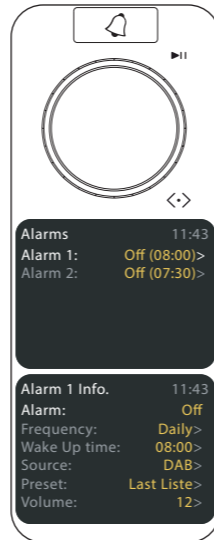

Other information

Backlight

To set the brightness of the display, there are 2 settings.

- ON LEVEL** - to adjust the brightness when the radio is in use
- DIM LEVEL** - to adjust the brightness when the radio is in standby.

Equaliser

The sound on your radio can be adjusted to suit your personal taste for the material that you are listening to.

Select from 7 different profiles,

Normal | Classic | Jazz | Pop | Rock | News | My EQ.

My EQ Setup enables 'Treble and 'Bass' levels to be set.

Sleep

Your radio can be set to turn off after a preset time has elapsed. With the unit switched on, press and hold the **Power/ Volume** control.

Rotate the **Tuning** control to push to select the required sleep time between 15-120 minutes.

An indicator on the base of the display shows the active sleep timer.

To cancel the sleep timer, enter the 'Sleep' menu and select 'OFF' or press the power button to cancel the sleep timer and switch your radio off.

Specifications

Power requirements

Mains (adaptor): 100 - 240V ~ 50/60Hz

Batteries: Roberts BP3 Lithium Ion battery (not included)

 
Battery life: Between 8 and 10 hours

Battery operation

Please read the safety leaflet provided before using batteries.

To connect the optional Lithium Ion battery pack,

1. Disconnect the unit from power.
2. Slide and rotate open the battery door.
3. Connect the battery cable to the socket inside.
4. Position cable under the battery and close door.

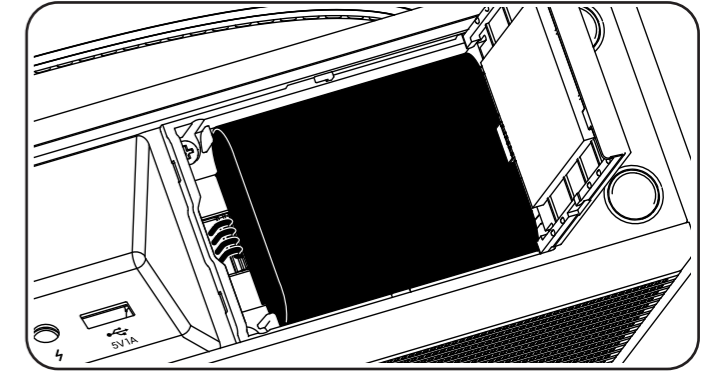


- When the Rambler Classic is low on battery, the low battery indicator will be displayed on the screen. The radio will then switch itself off. It may not be possible to switch the radio back on until the battery is recharged, or until the radio is connected to the mains adaptor.
- If the radio is not to be used for any extended period of time it is recommended that the battery is removed from the radio.

STEP 6 - Menu options

Menu options

- 1 Press the **Menu** button to access your radio's menu system.
- 2 Rotate the **Tuning** control to show menu options.

 - 3 Press **Tuning** control to select menu options.
- 4 To exit a menu, press the **Menu** button as needed.

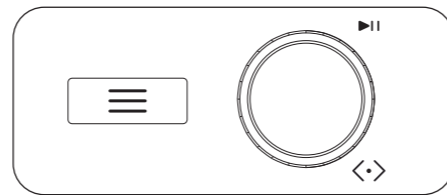

DAB menu

When in DAB mode, press the **Menu** button to access the following DAB menu options. Rotate the control and press to select an option.

Recall Preset - Access the favourites list.

Save Preset - Access the favourites list.

Station List - Access the station list.

Full Scan - Choose 'Scan' to scan the band III DAB channels.

Manual tune - Choose 'Manual Tune' and then choose the desired DAB channel. The signal strength will be displayed. The signal marker (II) shows the minimum strength needed for good DAB reception.

Prune - Choose 'Yes' to remove any stations that are no longer available.

DRC - Choose from 'DRC Off', 'DRC High' or 'DRC Low'. The DRC facility can make quieter sounds easier to hear when your radio is used in a noisy environment. **Note:** Not all DAB broadcasts use the DRC function.

Station order - Choose 'Station Order' and then choose either 'Alphanumeric', 'Ensemble'.

Slideshow - Choose between 'Small Image' and 'Full Screen'

Sleep - Your radio can be set to turn off after 15-120 minutes has elapsed.

Alarms - Access the alarm settings.

FM menu

When in FM mode, press the **Menu** button to access the following FM menu options. Rotate the control and press to select an option.

Recall Preset - Access the favourites list.

Save Preset - Access the favourites list.

Scan Setting - Choose 'Scan Setting' and then choose 'Distant' (your radio will scan for both weak and strong signals) or 'Local' (your radio will scan for stations with good reception).

Audio Setting - Allows selection of 'Auto' or 'Mono'. 'Auto' enables stereo to be played through headphones if a strong enough signal is present. If a station has a weaker signal and alternates between stereo and mono playback, selecting 'Mono' forces the signal to play mono.

Sleep - Your radio can be set to turn off after 15-120 minutes has elapsed.

Alarms - Access the alarm settings.

System settings

Press the **Menu** button to access the current menu options. Rotate the control to 'System' and press to select.

Equaliser - Choose from 7 sound profiles to suit the material that you are listening too.

Loudness - Choose 'On' to accentuate bass at low volume levels.

Time/Date - Options in this setting include:

Set Time/Date | Auto Update | Set 12/24 hour | Set Date Format.

Your radio will usually set the time using 'Any' signal, which is either DAB or FM.

Backlight - 2 settings enable adjustment of display brightness when on and in standby.

Inactive Standby - set your radio to turn after 2-8 hours of no user input.

Language - Choose 'System', 'Language' and then choose a desired language from the list.

Factory Reset - to completely reset your radio to its initial state perform a factory reset. Choose, 'Factory reset' then 'Yes'. All user entered settings will be erased.

Software Update - Software updates may be available in the future. Do not update unless recommended by customer support.

Software Version - The software display cannot be altered and is just for your reference. Choose 'Software Version'.

Roberts Rambler Classic

DAB+/FM RDS/Bluetooth Portable Radio



Please read this guide, safety/warranty and streaming leaflet before use

Circuit features

Headphone socket 3.5mm dia. stereo
Aux In socket 3.5mm dia. stereo

Aerial System DAB/FM Telescopic aerial

Bluetooth standards A2DP, AVRCP, Bluetooth codecs supported SBC & AAC
Bluetooth BLE EIRP POWER (MAX.) -0.07dBm
Bluetooth EDR EIRP POWER (MAX.) -0.01dBm

Frequency coverage FM 87.5 - 108MHz, DAB 174.928 - 239.200MHz
Bluetooth 5.2 frequencies 2.402 - 2.480GHz

Product markings

DC Power input 13.5V/2.0A USB output 5V/1A
~ This symbol indicates AC voltage. This symbol indicates DC voltage.

Mains adaptor

Manufacturer of AC Adaptor: Teka, Model: TEKA-TD135200XX, Input voltage: AC100 - 240V, Input AC frequency: 50/60Hz, Output voltage: DC13.5V, Output current: 2.0A, Output power: 27.0W, Average active efficiency: ≥ 86.62%, Efficiency at low load (10%) 77.3%, No-load power consumption: < 0.1W

Please handle with care. The leather-cloth finish may be susceptible to damage if mistreated. Avoid all contact with any abrasive material, chemical substances or cleaning solutions. Your radio may be wiped with a clean lightly damp cloth. Please ensure that the product is unplugged from the mains socket outlet before attempting this procedure.

Designed & Engineered in the UK

Roberts Radio Ltd, Roberts House, Hanworth Lane, Chertsey, KT16 9JX, UK
GlenDimplex Europe Ltd, Airport Road, Clongham, Co. Dublin, K67VE08, Ireland

Issue 2
2024-07-23



ROBERTS RADIO LIMITED

www.robertsradio.com

© 2024 Roberts Radio Limited

